



Disassembling Logitech Wireless Gaming Mouse G700 Mouse Buttons

Guide shows how to dismantle the top part of the mouse buttons. This is particularly useful when it is impossible to clean the dirt in the mouse.

Written By: Tomasz



INTRODUCTION

Guide shows how to dismantle the top part of the mouse buttons. This is particularly useful when it is impossible to clean the dirt in the mouse.

All you need is a screwdriver and a little patience.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Disassembling Logitech Wireless Gaming Mouse G700 Mouse Buttons



- Unplug the mouse by pulling the cord out of the top edge.

Step 2




- Power off the mouse

Step 3



- Remove the battery

Step 4

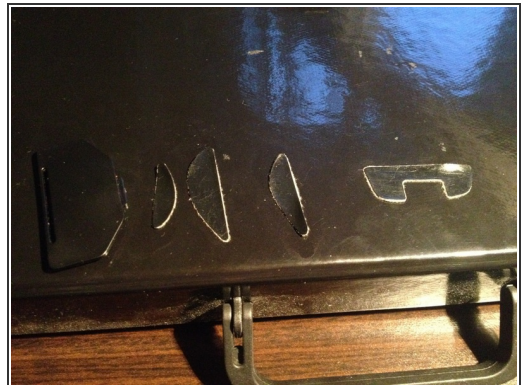

- In the marked spot, gently pry and peel off glides
- Try to stick it to a clean, flat surface for the time of repair

Step 5




- Remove the five screws hidden under gliders

Step 6




- Gently pry the front of the mouse to remove the cover

Step 7

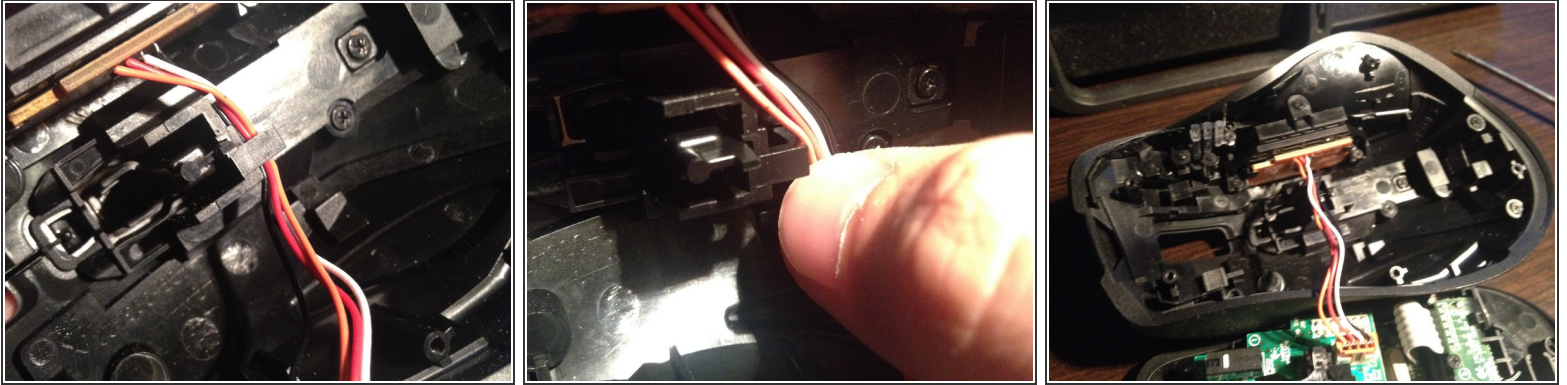

- Gently pull the four wires from the holder at the top of the casing

Step 8

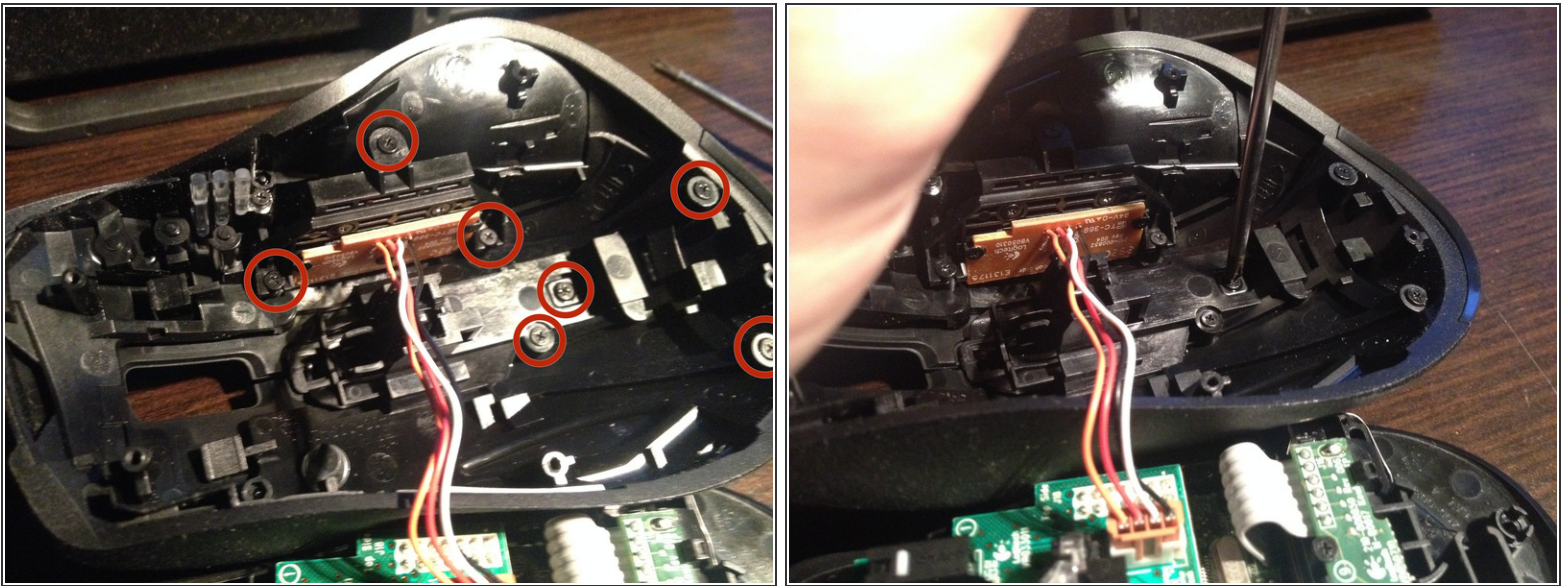


- Remove the seven screws holding the upper part of the housing and the side keys. You only need to remove the four near the bottom to remove the top cover.

Step 9



- Gently press into the side keys and slide it towards the bottom of the housing

Step 10

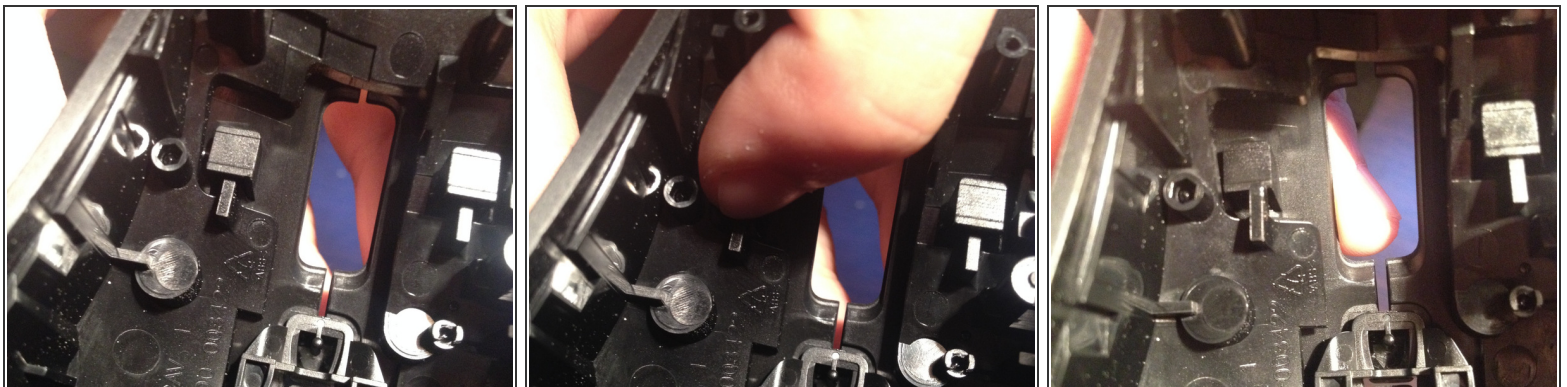

- Gently pry the lock holding both mouse buttons

Step 11



- Gently pry the upper part of the housing

Step 12



- Unscrew the two screws holding the part that lock function buttons

Step 13



- Remove plastic part

Step 14



- Pull the buttons. Watch out for small springs.

Step 15



- Ready! Congratulations - you can clean the mouse!
- Be careful when tightening the screws during reassembly. Due to their small size they strip the sockets easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:52:48 PM.